

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USE

- Always operate the stick mixer from power source of the same voltage. Frequency and rating as indicated on the product identification plate.
- Do not use with an extension cord.
- Close supervision is necessary when stick mixer is used by or near children, or incapacitated persons. Do not allow children to use it as a toy.
- Do not operate stick mixer with a damaged cord or plug, after the appliance malfunction or if it is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or electrical cause fire, electrical shock or injury.
- Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split particularly where it enters the unit.
- To protect against risk of electrical shock, do not put stick mixer motor in water or other liquid. This may cause personal injury and/or damage to the product.
- After each operation, allow the stick mixer to cool for 3 minutes before using it again.
- Do not process food containing hard objects that cannot be safely broken up by the blade.
- To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.

- This stick mixer should not be used in the immediate vicinity of water, or immersion or splashing could occur.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from blade during operation to reduce the risk of injury to persons and/or damage to the stick mixer. A spatula or scraper may be used when the appliance is not in operation.
- When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.

visit us at www.oster.com P.N. 118159



MODELS/MODELOS
MODÈLES **2605, 2606, 2607**

 
User Manual 2605/2606/2607 HAND BLENDER WITH BLENDING CUP AND CHOPPER
Manual de Instrucciones 2605/2606/2607 MEZCLADORA MANUAL Y VASO PARA MEZCLAR Y HACHER
Manuel d'Instructions 2605/2606/2607 MELANGEUR PORTATIF AVEC BOL A MELANGER ET A HACHER



BIENVENIDOS

¡Felicitaciones en su compra de un Batidora de Inmersión OSTER®. Muchas gracias por comprar la Batidora de Inmersión OSTER®. Antes de usar este producto por primera vez, por favor tómeselo algunos minutos para leer estas instrucciones y guárdelas como referencia. Prestele particular atención a las Instrucciones de Seguridad suministradas. Por favor revise las declaraciones de garantía y de servicio del producto.

CARACTERÍSTICAS DE SU BATIDORA DE INMERSIÓN

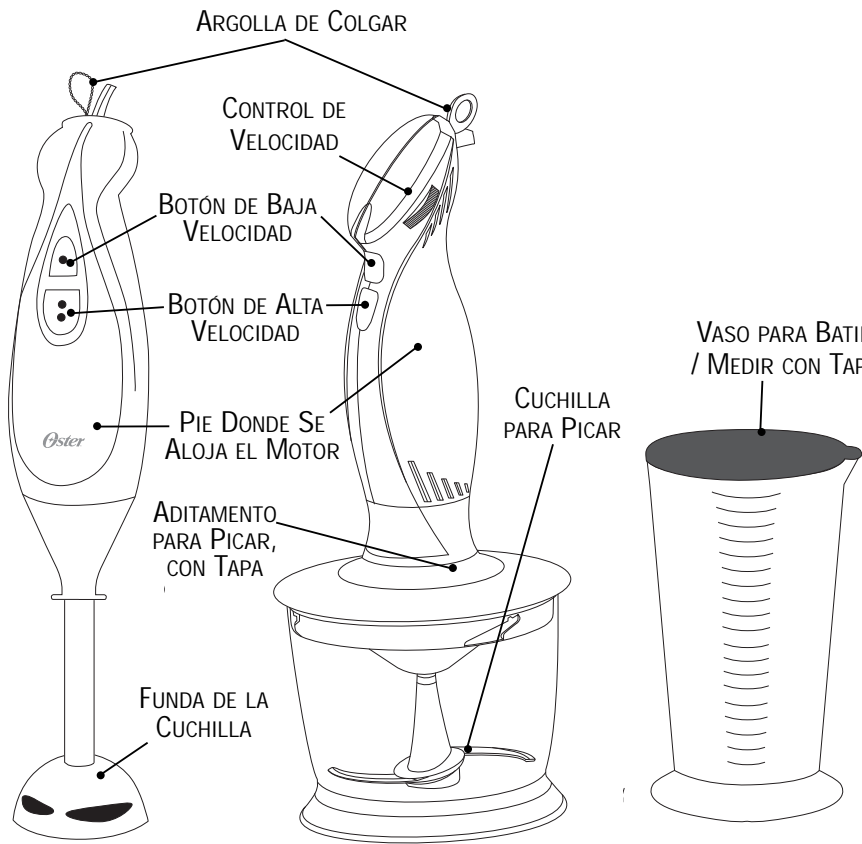

Los dibujos pueden variar

WELCOME

Congratulations on your purchase of an OSTER® Stick Mixer! Please review the product service and warranty statements.

Thank you for purchasing the OSTER® Stick Mixer. Before you use this product for the first time, please take a few moments to read these instructions and keep it for reference. Pay particular attention to the Safety Instructions provided.

- Do not place stick mixer on or near a hot burner or in a heated oven.
- This appliance is not intended to chop ice. Add ice to beverage after mixing.
- Blades are sharp. Handle with extreme care.
- Do not use stick mixer for other than intended use.
- Do not operate stick mixer with a damaged cord or plug, after the appliance malfunction or if it is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or electrical cause fire, electrical shock or injury.
- Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split particularly where it enters the unit.
- To protect against risk of electrical shock, do not put stick mixer motor in water or other liquid. This may cause personal injury and/or damage to the product.
- After each operation, allow the stick mixer to cool for 3 minutes before using it again.
- Do not process food containing hard objects that cannot be safely broken up by the blade.
- To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
- This stick mixer should not be used in the immediate vicinity of water, or immersion or splashing could occur.
- Switch off and unplug from outlet while not in use, before putting on or taking off parts and before cleaning. Remove by grasping the plug; do not pull on the cord.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from blade during operation to reduce the risk of injury to persons and/or damage to the stick mixer. A spatula or scraper may be used when the appliance is not in operation.
- When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.

 
THIS UNIT FOR HOUSEHOLD USE ONLY

FOR PRODUCTS PURCHASED IN THE U.S. AND CANADA ONLY

To reduce the risk of electrical shock, this appliance has a polarized plug (*one blade is wider than the other*). This plug fits a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

For your convenience, record the complete model number (*located on the back of the motor*) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that the warranty service is required.

English-2
Español-3
Español-2

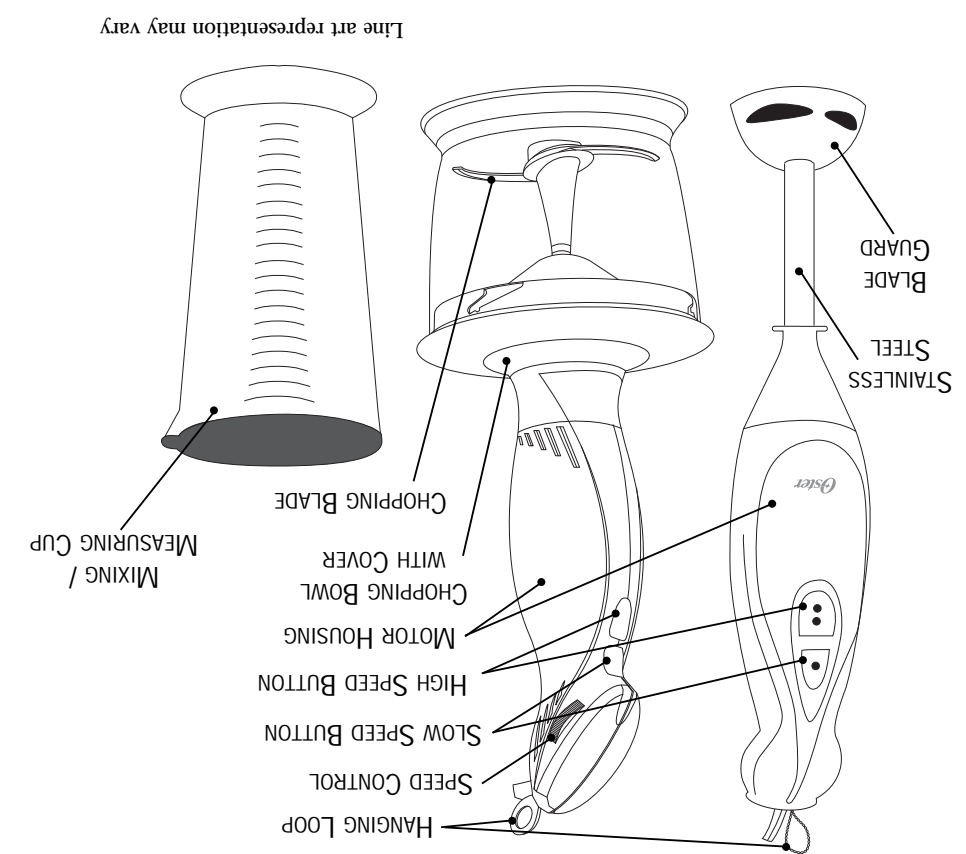

Line art representation may vary

Read and follow all the instructions for this section on Use and Care and find a place to keep all this instruction manual ready for future reference.

For your convenience, record the complete model number (*located on the back of the motor*) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that the warranty service is required.

NOTE: The use of attachments not recommended or sold by Sunbeam Products may cause fire, electrical shock, injury or damage to the product.

English-3
Español-2

ESTA UNIDAD ES SÓLO PARA USO DOMÉSTICO

UNICAMENTE PARA PRODUCTOS DE 120 Y 127 VOLTIOS

Con el fin de reducir el riesgo de una descarga eléctrica, este artefacto tiene un enchufe polarizado (*una pata es más ancha que la otra*) Este enchufe sólo le sirve a una toma de corriente polarizada; si el enchufe no entra en la toma de corriente, invierta las patas. Si aún no entra, póngase en contacto con un electricista calificado. No intente vencer este dispositivo de seguridad.

PRECAUCIÓN: Las cuchillas están afiladas. Manipúlelas con cuidado. Mantenga las manos y utensilios fuera del recipiente mientras opera la batidora con el fin de evitar la posibilidad de heridas corporales severas y/o daños al producto o a la propiedad.

- Este producto fue diseñado únicamente para uso doméstico normal.

- No use la batidora de inmersión para un uso diferente al indicado.

- No deje la batidora de inmersión sola mientras está operando.

 
- Las cuchillas están afiladas. Manipúlelas con extremo cuidado.

- No coloque la batidora de inmersión sobre o cerca de un quemador caliente o dentro de un horno caliente.
- Al mezclar líquidos, especialmente líquidos calientes, use un recipiente alto o prepare cantidades pequeñas para evitar que se derrame.

OPERATING INSTRUCTIONS

To Operate Your Hand Blender

- Your blender is a three-part assembly. The upper part contains the motor housing and the speed buttons. The lower part contains the Blade.
- To Lock: Hold the motor housing in the right hand and the Blade housing or the chop housing in the left. Attach the motor housing up to the Blade housing or the chop housing. Rotate the Blade housing to the left. The assembly locks firmly.
- To Unlock: Hold the motor housing in the right hand and the Blade housing or the chop housing in the left. Rotate the motor housing to the right to separate the units.
- Place dial purpose lid on the bottom of the blending/measuring cup for added stability.
- Immerse the blade guard completely into ingredients.
- Hold the hand blender firmly.
- NOTE: During blending use, it is normal for suction to be created at the bottom of the container.
- When desired consistency has been reached, release button and lift the blender from mixture. To prevent splashing, always release button before removing the container.
- To Lock: Hold the motor housing in the right hand and the Blade housing or the chop housing in the left. Attach the motor housing up to the Blade housing or the chop housing. Rotate the Blade housing to the left. The assembly locks firmly.
- To Unlock: Hold the motor housing in the right hand and the Blade housing or the chop housing in the left. Rotate the motor housing to the right to separate the units.
- Place dial purpose lid on the bottom of the blending/measuring cup for added stability.
- Immerse the blade guard completely into ingredients.
- Hold the hand blender firmly.

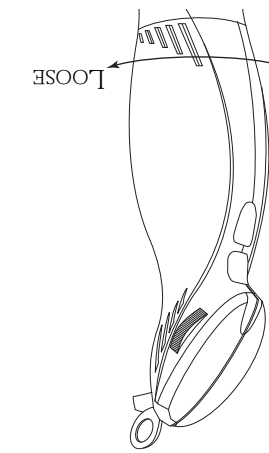

BLENDING CUP / MEASURING CUP INFORMATION

- The lid can be easily used as a cover for storage.
- For added stability, use the dial purpose lid on the base of the Mixing Cup.
- The cup which is included with your hand blender functions as a mixing cup, a measuring cup and can also be used for storage.

Secure the chopper cover by setting on the bowl and turning to the right until firmly locked into place. The upper shaft of the chopping blade will fit into the receiving hole in the underside of the cover. Attach the motor housing into the top of the bowl cover and turn to the right until the motor housing is firmly locked into place. Plug cord into comment outlet.

English-4
Español-1

- Evite contacto con piezas en movimiento. Mantenga las manos, el cabello, la ropa, como también espátulas y otros utensilios alejados durante la operación con el fin de reducir el riesgo de heridas corporales y/o daños a la batidora de inmersión. Se puede usar una espátula o raspador cuando el artefacto no está en operación.
- Apáguela y desenchúfela del tomacorriente cuando no la esté usando, antes de ponerle o quitarle piezas y antes de limpiarla. Desenchúfela agarrando el enchufe, no hale el cordón.
- Esta batidora de inmersión no debe usarse cerca del agua, tal como la bañera, lavamanos, piscina, etc., donde exista el peligro de inmersión o salpicaduras.
- Para evitar un incendio, no opere la unidad en presencia de explosivos y/o gases inflamables.
- No procese alimentos que contengan objetos duros que no puedan ser quebrados seguramente por la cuchilla.
- Después de cada operación, deje que la batidora se enfríe durante 3 minutos antes de usarla de nuevo.
- No opere la batidora de inmersión con un cordón o enchufe dañados, después de que el artefacto haya fallado o si se cae al suelo o se daña de cualquier otra manera. Devuelva el artefacto al Centro de Servicio Autorizado más cercano para examinarlo, repararlo o para ajustarlo mecánica o eléctricamente.
- No use la batidora de inmersión para un uso diferente al indicado.
- No deje la batidora de inmersión sola mientras está operando.
- Las cuchillas están afiladas. Manipúlelas con extremo cuidado.
- Este artefacto no fue diseñado para picar hielo. Agréguele el hielo a la bebida después de mezclarla.
- Este producto fue diseñado únicamente para uso doméstico normal.

- No use la batidora de inmersión para un uso diferente al indicado.

- Para protegerse contra el riesgo de una descarga eléctrica, no coloque el motor de la batidora de inmersión en agua o en ningún otro líquido. Esto podrá causar heridas corporales y/o daños al producto.
- Para protegerse contra el riesgo de una descarga eléctrica, no coloque el motor de la batidora de inmersión en agua o en ningún otro líquido. Esto podrá causar heridas corporales y/o daños al producto.
- No opere la batidora de inmersión con un cordón o enchufe dañados, después de que el artefacto haya fallado o si se cae al suelo o se daña de cualquier otra manera. Devuelva el artefacto al Centro de Servicio Autorizado más cercano para examinarlo, repararlo o para ajustarlo mecánica o eléctricamente.
- No use la batidora de inmersión para un uso diferente al indicado.
- No deje la batidora de inmersión sola mientras está operando.
- Las cuchillas están afiladas. Manipúlelas con extremo cuidado.
- Este artefacto no fue diseñado para picar hielo. Agréguele el hielo a la bebida después de mezclarla.
- Este producto fue diseñado únicamente para uso doméstico normal.

PRECAUCIÓN: Las cuchillas están afiladas. Manipúlelas con cuidado. Mantenga las manos y utensilios fuera del recipiente mientras opera la batidora con el fin de evitar la posibilidad de heridas corporales severas y/o daños al producto o a la propiedad.

- Este artefacto no fue diseñado para picar hielo. Agréguele el hielo a la bebida después de mezclarla.
- No use la batidora de inmersión para un uso diferente al indicado.
- No deje la batidora de inmersión sola mientras está operando.
- Las cuchillas están afiladas. Manipúlelas con extremo cuidado.
- Este artefacto no fue diseñado para picar hielo. Agréguele el hielo a la bebida después de mezclarla.
- Este producto fue diseñado únicamente para uso doméstico normal.

- No use la batidora de inmersión para un uso diferente al indicado.

- No use la batidora de inmersión para un uso diferente al indicado.

PRECAUCIONES IMPORTANTES

Cuando use algún aparato eléctrico siempre deben seguirse precauciones básicas de seguridad incluyendo las siguientes:


LEA TODAS LAS INSTRUCCIONES ANTES DE USAR

MEASURING CHART FOR BLENDING CUP

MILLILITERS	CUPS	OUNCES
50	.21	1.70
100	.42	3.40
150	.63	5.00
200	.85	6.76
250	1.10	8.50
300	1.25	10.00
350	1.50	12.00
400	1.70	13.50
450	1.90	15.25
500	2.10	17.00
550	2.32	18.50
600	2.50	20.25
650	2.75	22.00
700	3.00	24.00

USING THE CHOPPER ATTACHMENT

 - Insert cutting blade into the chopping bowl
- For best results, cut large ingredients into pieces of approximately 1/2-inch cubed before chopping
- NOTE: Do not chop large ice cubes or extremely hard foods, such as whole nutmegs, coffee beans, dried corn and grains.
- Secure the chopper cover by setting on the bowl and turning to the right until firmly locked into place. The upper shaft of the chopping blade will fit into the receiving hole in the underside of the cover.
- For added stability, use the dial purpose lid on the base of the Mixing Cup.
- The lid can be easily used as a cover for storage.
- The cup which is included with your hand blender functions as a mixing cup, a measuring cup and can also be used for storage.

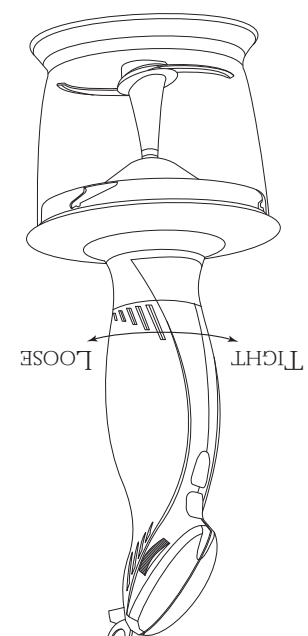

- The chopper has variable speeds. Press and hold the appropriate button to switch the mixer on. Release the button to switch the unit off.

English-5
English-7

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

How To Obtain Warranty Service: Please see the country specific warranty insert or contact your local authorized distributor.

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an Authorized Service Center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.


One-Year Limited Warranty

Sunbeam Products, Inc. ("Sunbeam"), d/b/a Jarden Consumer warrants that for a period of ONE year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during this warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

©2005 Sunbeam Products, Inc., d/b/a Jarden Consumer Solutions. All rights reserved. In the U.S., distributed by Sunbeam Products, Inc., d/b/a Jarden Consumer Solutions, Boca Raton, FL 33431 In Canada, imported and distributed by Sunbeam Corporation, Limited.

USA : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

For product questions contact:
Sunbeam Consumer Service

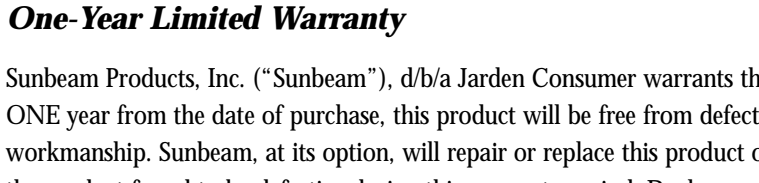

Printed in China

Imprimé en Chine

Impreso en China

English-6

English-7

Imprimé en Chine

Impreso en China

English-6

English-7

Imprimé en Chine

Impreso en China

English-6

English-7

Imprimé en Chine

Impreso en China

English-6

English-7

Imprimé en Chine

Impreso en China

English-6

English-7

Imprimé en Chine

Impreso en China

Printed in China

Imprimé en Chine

Impreso en China

English-6

English-7

Imprimé en Chine

Impreso en China

English-6

English-7

Imprimé en Chine

Impreso en China

English-6

English-7

Imprimé en Chine

Impreso en China

English-6

English-7

Imprimé en Chine

Impreso en China

English-6

English-7

Imprimé en Chine

Impreso en China

