

 


User Manual

---

# Dura-Built Blender™

## MODEL BLSTSR-PZ0

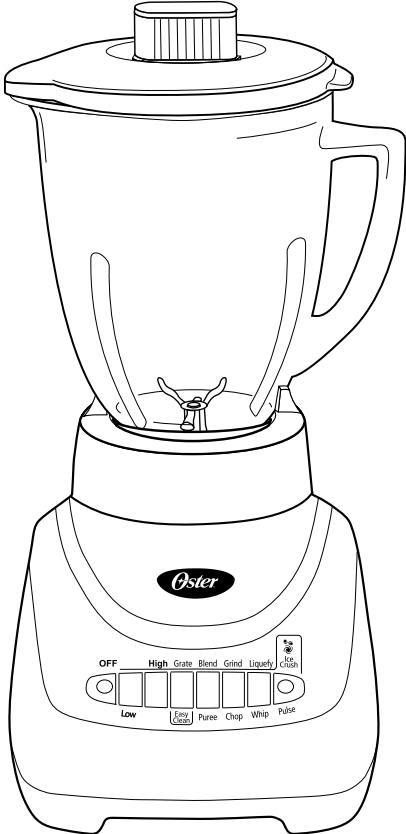

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USE

- Unplug cord from outlet when not in use or before cleaning.
- To protect against risk of electrical shock, do not immerse the cord, plug or motor base in water or any other liquids.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Never leave appliance unattended when in use.
- Close supervision is necessary when used by or near children.
- Avoid contact with moving parts. Keep hands and utensils out of jar while blending to prevent personal injury or damage to the blender. A rubber spatula may be used only when the blender is not running.
- The blade is sharp. Handle with care.
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Always put the lid on the jar before operating the blender.
- Do not blend boiling liquids in the blender.
- When blending hot liquids beware of steam. Remove the filler cap from the lid to allow steam to escape.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest Authorized Sunbeam Appliance Service Center for examination, repair or electrical mechanical adjustment.
- Do not use outdoors or for commercial purposes; this appliance is for household use only.
- Always operate on a flat surface.
- Unplug the blender when not in use, before taking off or putting on parts and before cleaning.
- Use this appliance for its intended use as described in this manual. The use of attachments not made by the manufacturer, including canning or ordinary jar and processing assembly parts, is not recommended by Sunbeam Products, Inc. and may cause injury.

## THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

The maximum rating marked on the product is based on the attachment that draws the greatest load. Other attachments may draw less power.

# POWER CORD INSTRUCTIONS

Please follow the instructions below to ensure the safe use of the power cord.

- This appliance is equipped with a polarized plug. This type of plug has one blade that is wider than the other. This plug will fit in a polarized outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.
- You may use an extension cord, if necessary, but be certain to follow these guidelines:
  - The marked electrical rating of the extension cord must be at least 120/127 Volt, 60 Hz, 10A.
  - The extension must be arranged so that it will not drape over the countertop or tabletop, will not be within the reach of children, and will not be tripped over.
  - Do not pull, twist or otherwise abuse the power cord.

 
# SAVE THESE INSTRUCTIONS

# Welcome

Congratulations on your purchase of an Oster® Blender!  
To learn more about Oster® products, please visit us at [www.oster.com](http://www.oster.com).

## FEATURES OF YOUR BLENDER

- A. Filler Cap for adding ingredients while blending
- B. Splash proof Blender Lid
- C. Your Oster® Blender includes a 6-cup (1.4 L) Glass Jar
- D. Sealing Ring for tight seal
- E. Ice Crusher Blade System pulverizes ice for smooth frozen drinks
- F. Threaded Bottom Cap
- G. Blender Base
- H. Powerful motor with ALL-METAL-DRIVE for lasting durability
- I. Control Panel
- J. PULSE and ICE CRUSH for precise blending control
- K. HIGH and LOW Buttons
- L. Easy Clean Cycle

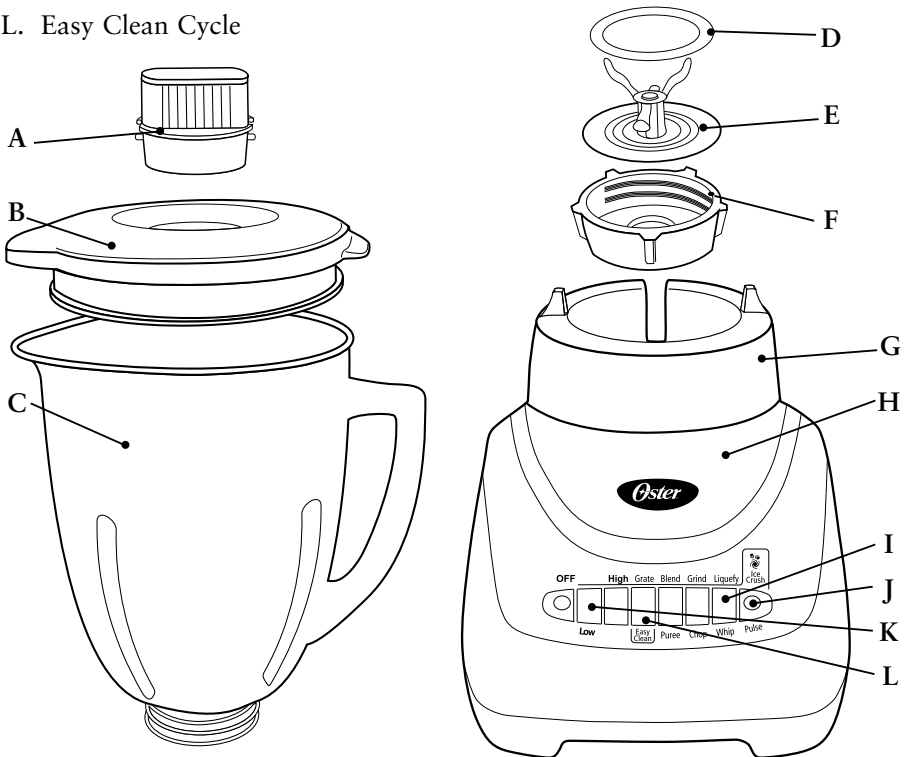

# Using Your Blender

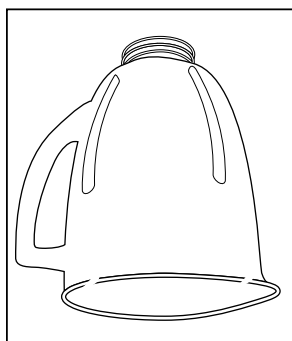 


FIGURE 1

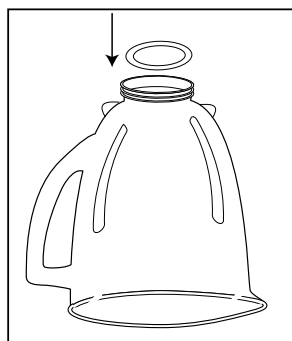 


FIGURE 2

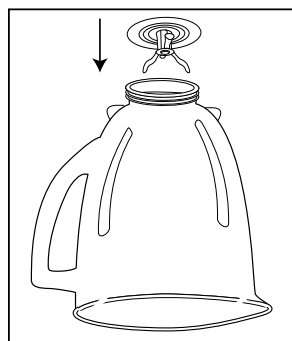 


FIGURE 3

1. Clean Blender according to the instructions in the “Cleaning and Storing Your Blender” section. (Page 7)
2. Turn Blender Jar upside down so the small opening is at the top. (Figure 1)
3. Place Sealing Ring over Blender Jar opening. (Figure 2)
4. Place Blade System into Blender Jar. (Figure 3)
5. Place the Threaded Bottom Cap on Blender Jar and turn it clockwise to tighten. (Figure 4)
6. Place Blender Jar assembly onto Blender Base. (Figure 5)
7. **Line up tabs on Blender Base.** Make sure the tab on the jar (near the handle) is in front of the tab on the Blender Base. (Figure 6) Blender Jar should now be seated into position.
8. Place ingredients into Blender Jar.

**NOTE:** For best results, always add liquids first when blending, unless a recipe says otherwise.

9. Place Blender Lid with Filler Cap on Blender Jar.
10. Press OFF before plugging into an electrical outlet.

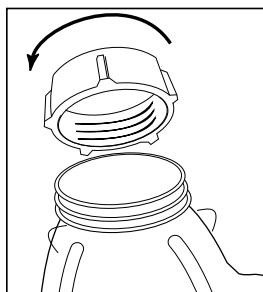 


FIGURE 4

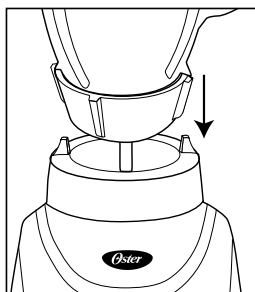 


FIGURE 5

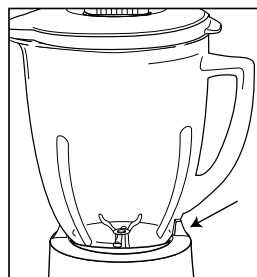 


FIGURE 6

11. Plug the power cord into a 120 Volt AC electrical outlet.
12. Select HIGH or LOW button prior to pressing the desired speed of operation. Other buttons can be pressed to increase or decrease blending speed.
13. Push desired speed and blend ingredients to desired consistency.
14. Press OFF to stop the Blender.
15. To use PULSE, select HIGH or LOW. Push PULSE and hold down for desired length of time. Release PULSE and allow blade to stop. Repeat cycle as desired.

## Blending Tips

- Put liquids in the Blender Jar first, unless a recipe says otherwise.
- Crushing ice: Crush 6 ice cubes or approximately 2 cups of ice. Cover ice with about 1 cup or 0.25 Liters of water for best results.
- Do not remove the Blender Lid while in use. Remove Filler Cap to add smaller ingredients. (*Figure 7*)
- Cut all firm fruits and vegetables, cooked meats, fish and seafood into pieces no larger than 3/4 inch (1.9 cm) to 1 inch (2.5 cm). Cut all kinds of cheeses into pieces no larger than 3/4 inch (1.9 cm).
- This Blender will not mash potatoes, whip egg whites or substitute dairy toppings, mix stiff dough or grind raw meat.

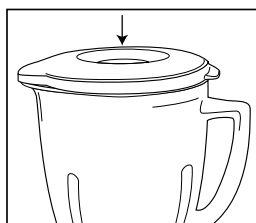 


FIGURE 7

## Hot Foods

- Open the Filler Cap to vent steam. Tilt Filler Cap away from you. Keep hands away from the cover opening to prevent possible burns.
- When working with hot liquids, remove Filler Cap and start blending at a low speed. Then move to a faster speed. DO NOT add liquid over the 4 cup (1 liter) level.

# Easy Clean Cycle

Quickly cleans jars in between batches without disassembly.

**NOTE:** Easy Clean is not a substitute for regular cleaning describe below. It is especially important to disassemble and thoroughly clean your blender when processing milk, meats, seafood and eggs.

Pour 3 cups of warm water in the blender Jar. Add 1 – 2 drops of liquid dishwashing detergent. Set it on **LOW** and press **EASY CLEAN** button.

Run blender for 20-30 seconds then press **OFF** button. Empty jar of soapy water into sink. Rinse jar thoroughly with clean water.

## Cleaning Your Blender

**IMPORTANT: UNPLUG BEFORE CLEANING. DO NOT IMMERSE THE BLENDER BASE IN WATER OR ANY OTHER LIQUID.** Use a damp, soft sponge with mild detergent to clean the outside of the Blender Base. All parts except for the Blender Base are dishwasher-safe. Place Sealing Ring in bottom basket of dishwasher. You can also wash the parts in warm, soapy water. Rinse well and dry.

## Storing Your Blender

After cleaning, reassemble Blade System to Blender Jar with Sealing Ring and Blender Jar Bottom Cap. Store Blender with cover ajar to prevent container odor.

---

## Recipes

For fun and creative recipes for your new Oster® Blender please visit [www.oster.com](http://www.oster.com). Here you will find everything from the perfect Breakfast Smoothie to creamy Soups, Sauces and a host of Oster® signature Frozen Drinks. For the perfect recipe for any occasion—turn on your creativity with Oster® Blenders!

### GINGER PEACH SMOOTHIE

Makes Cups	Yogurt (Ounces)	Ice Cubes Medium	Frozen Sliced Peaches	Frozen Banana (2 inch chunks)	White Grape Juice (Ounces)	Ground Ginger (Tsp)
2	8	2	5	2	3	1/8
3	12	3	8	3	4 1/2	1/5
4	16	4	10	4	6	1/4
5	20	5	13	5	7 1/2	1/3
6	24	6	15	6	9	3/8

## STRAWBERRY SMOOTHIE

Makes Cups	Yogurt (Ounces)	Ice Cubes Medium	Frozen Strawberries (1 inch dia. max)	Frozen Banana (2 inch chunks)	White Grape Juice (Ounces)	Ground Ginger (Tsp)
2	7	2	2	2	3	1/8
3	11	3	3	3	4 1/2	1/5
4	14	4	4	4	6	1/4
5	18	5	5	5	7 1/2	1/3
6	21	6	6	6	9	3/8

## VANILLA MILKSHAKE

Makes Cups	Ice Cream Cups	Milk (Ounces)	Vanilla (Tsp)
2	2	6	1/8
3	3	9	1/4
4	4	12	1/4
5	5	15	3/8
6	6	18	3/8

## MARGARITA

Makes Cups	Tequila (Ounces)	Margarita Mix (Ounces)	Ice Cups
2	2	6	1 1/2
3	3	9	2 1/2
4	4	12	3
5	5	15	4
6	5 1/2	18	5



### **3 Year Satisfaction Guarantee**

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period of three (3) years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at the Consumer’s sole option, will repair, or replace this product or any component of the product found to be defective during the guarantee period. This guarantee is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain satisfaction guarantee performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this guarantee.

### **All Metal Drive Ten (10) Year Limited Warranty**

JCS also warrants that for a period of ten (10) years from the date of purchase, the All Metal Drive base unit metal coupling will be free from defects in material and workmanship. JCS, at its option, will repair or replace the metal drive stud component of the All Metal Drive coupling if found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty does not cover damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this limited warranty.

### **What are the limits on JCS’ Liability?**

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition. Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above limited warranty. JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise. JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### **How to Obtain Satisfaction Guarantee and/or Limited Warranty Service**

#### **In the U.S.A.**

If you have any question regarding this guarantee or limited warranty or would like to obtain guarantee or limited warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

#### **In Canada**

If you have any question regarding this guarantee or limited warranty or would like to obtain guarantee or limited warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this guarantee and limited warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this guarantee and limited warranty is offered by Sunbeam Corporation (Canada) Limited, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write to the Consumer Service Department.

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

*For inquiries regarding recycling and proper disposal of this product, please contact your local waste management facility.*







For product questions contact:  
Sunbeam Consumer Service

USA: 1.800.334.0759

**[www.oster.com](http://www.oster.com)**

©2014 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions.  
All rights reserved. Distributed by Sunbeam Products, Inc. doing business as  
Jarden Consumer Solutions, Boca Raton, Florida 33431.