

# *Oster*® Countertop Oven Function Guidelines

<b>BAKE</b>	Top & bottom heating elements ON Food placed directly on wire rack or on baking pan
<b>TOAST</b>	Top & bottom heating elements ON Food placed directly on wire rack
<b>BROIL</b>	Top heating elements ON Food placed directly on wire rack Broil pan placed into guide rails below the rack
<b>WARM</b>	Top & bottom heating elements ON Food placed directly on wire rack or on baking pan
<b>CONVECTION BAKE</b>	Top & bottom heating elements ON Food placed directly on wire rack or on baking pan
<b>DEFROST</b>	Top & bottom heating elements ON Food placed directly on wire rack or on baking pan