

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

 
1. Read all instructions before using this product.
2. ⚠ This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs. Always protect your hands with non-slip oven mitts or similar. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
3. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
4. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
5. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord. Always grasp the plug and pull to disconnect.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors or for commercial purposes.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance or removing a pan, containing hot oil or other hot liquids. Always protect your hands with non-slip oven mitts or similar.
12. Do not use appliance for other than intended use. Misuse can cause injuries. Intended for household countertop use only. Keep 6 inches (152 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.
13. Oversize foods or metal utensils must not be inserted in a countertop oven as they may create a fire or risk of electric shock.
14. A fire may occur if the countertop oven is covered, touching or near flammable materials, including curtains, draperies, towels, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
15. Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
16. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
17. Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials that may catch fire or melt.

20. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
21. Empty the crumb tray after each use.
22. The glass door is made of tempered glass. Always inspect the glass door for chips, cracks or any other damage. Do not use the countertop oven if the glass door is damaged, as the glass may shatter during use.
23. Do not use with a programmer, timer, wireless plug adapter or outlet that allows control remotely, or connect to a circuit that is regularly switched on and off by the utility.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

North American models with polarized plugs:

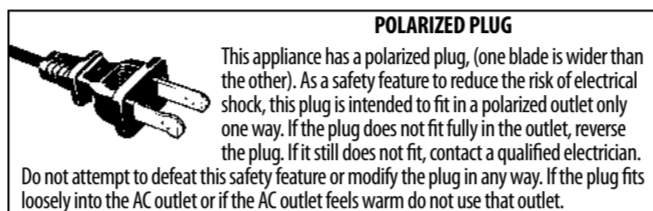

POWER CORD INSTRUCTIONS:

A short power-supply cord or detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used:

- a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- b. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
- c. If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

 
Do not pull, twist or otherwise abuse the power cord.

NOTICES

1. Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your countertop oven to prevent possible damage to the surface.
2. During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

Welcome

Congratulations on your purchase of an OSTER® Countertop Oven! If you require service on your OSTER® Countertop Oven, do not return to place of purchase. Please contact us at www.oster.com or 1.800.334.0759.

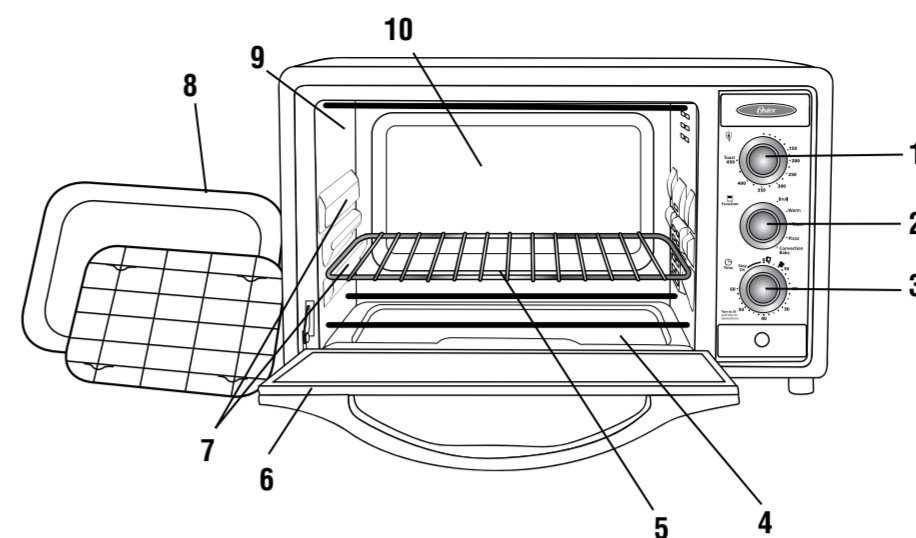

Learning About Your Countertop Oven

1. Temperature Control Knob – Adjust the dial thermostat to the desired temperature. (See Figure 1)

2. Function Selector Knob – Select cooking function by turning knob to desired setting. (See Figure 2)

3. Timer Control Knob with Bell Signal – Set cooking time up to 60 minutes. Will automatically turn the oven OFF at the end of the cooking time. (See Figure 3)

4. Removable Crumb Tray – For crumb or fallen food particles collection. Place at the bottom of the oven, below heating elements. Pulls out for easy cleaning.

5. Removable Wire Rack – See “Positioning Rack” section.

 
 
 
6. Tempered Glass Door – For front viewing of food.

7. Two Rack Positions

8. Baking Pan & Broil Rack – Use for all your baking, broiling and grilling needs.

9. Easy Clean Interior Walls – Allows fast clean up.

10. Pizza Fit Capacity – Fits most large frozen pizzas.

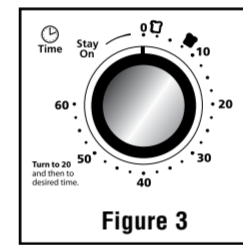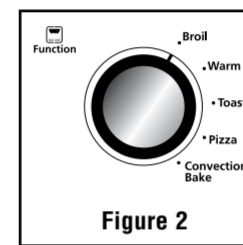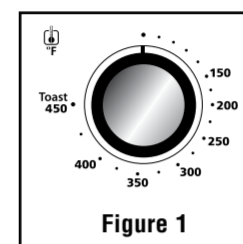

Preparing To Use Your Countertop Oven for the First Time

 
NOTE: During initial start up you may detect a slight smell and/or smoke. Turn the temperature to max and let run for approximately 5 minutes.

If you are using your Countertop oven for the first time, please be sure to:


- Remove any stickers from the surface of the oven.
 - Open oven door and remove all printed documents and paper from inside the Countertop Oven.
 - Clean the rack, and pan with hot water, a small amount of dishwashing liquid and a non-abrasive cleaning pad.
 - Place crumb tray at the bottom of the oven, below heating elements.
- CAUTION: DO NOT IMMERSE THE BODY OF THE UNIT IN WATER.**
- Dry the unit thoroughly before using.
 - Select a location for the Countertop Oven. The location should be in an open area on a flat counter where the plug will reach an outlet.
 - Plug the Countertop Oven into a 120 Volt AC electrical outlet.
- WARNING:** When Countertop Oven is in use or cooling down, please be sure there is a 6-inch clearance between the Countertop Oven and any other surface including cords. Be sure the cord is not resting against the back of the Countertop Oven.

To Open the Oven Door:

Step 1: Grab the center of the handle underhanded with fingertips (See Figure 4).

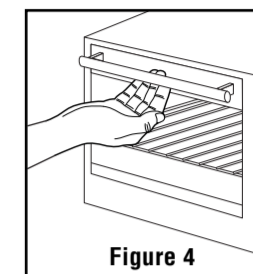

 
Step 2: Pull down the oven door carefully (See Figure 5).

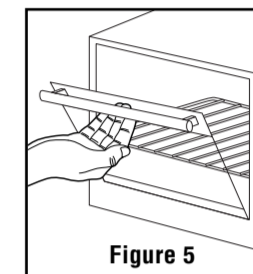

CAUTION: This appliance generates heat during use. Do not touch hot surfaces. Always use handles or knobs per above instructions.

To Use the Toast Function

 - Step 1. Place food on Wire Rack.
 - Step 2. Close glass door completely.
 - Step 3. Turn the Function dial to Toast.
 - Step 4. Turn the Temperature dial to 450° F
 - Step 5. Turn the Timer past 20 minute mark to engage timer, then back to desired toast time anywhere between the Toast symbols.
 - Step 6. When toasting is complete, open door completely and remove food.
- WARNING:** Cooked food and metal rack can be very hot, handle with care. Do not leave Countertop Oven unattended.

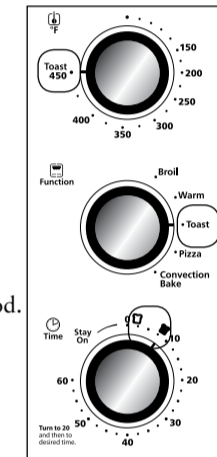

For best toasting results, position the rack in the upper position.

English-4



User Manual Countertop Oven

Manual de Instrucciones Horno de Mostrador

MODEL/ MODELO **TSSTTVRB04**



English-1

To Use the Convection Bake Function

The Convection Heat function turns on a built in fan that circulates hot air in the oven chamber to better heat food.

Preheat oven 5 minutes at desired temperature with oven rack in place.

- Step 1. Place baking pan with food inside on wire rack.
- Step 2. Close glass door completely.
- Step 3. Turn the Function dial to Convection Bake.
- Step 4. Turn the Temperature dial to desired setting.
- Step 5. Turn the Timer to desired cook time.

SPECIAL NOTE: If cook time is less than 20 minutes, you must turn Timer past the 20 minute mark to engage the timer then back to desired time.

Step 6. When baking is complete, open door completely and remove food.

WARNING: Cooked food and metal rack can be very hot, handle with care. Do not leave Countertop Oven unattended.

To Use the Warm Function

- Step 1. Place baking pan with food inside on wire rack.
- Step 2. Close glass door completely.
- Step 3. Turn the Function dial to Warm.
- Step 4. Turn the Temperature dial to 200° F.
- Step 5. Turn the Timer to desired warming time.

SPECIAL NOTE: If cook time is less than 20 minutes, you must turn Timer past the 20 minute mark to engage the timer then back to desired time.

Step 6. When Warming is complete, open door completely and remove food.

WARNING: Cooked food and metal rack can be very hot, handle with care. Do not leave Countertop Oven unattended.

 
 
 
To Use the Pizza Function

- Step 1. Place baking pan with food inside on wire rack.
- Step 2. Close glass door completely.
- Step 3. Turn the Function dial to Pizza.
- Step 4. Turn the Temperature dial to 400° F.
- Step 5. Turn the Timer to desired cook time.

SPECIAL NOTE: If cook time is less than 20 minutes, you must turn Timer past the 20 minute mark to engage the timer then back to desired time.

Step 6. When cooking is complete, open door completely and remove food.

WARNING: Cooked food and metal rack can be very hot, handle with care. Do not leave Countertop Oven unattended.

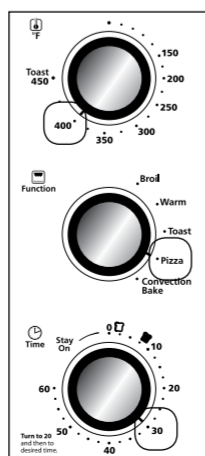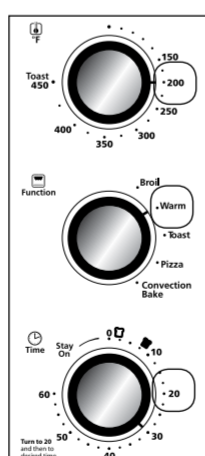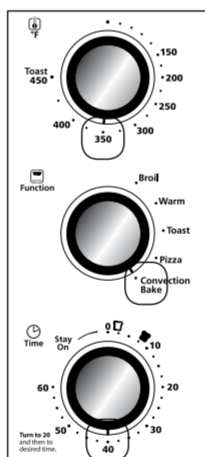

To Use the Broil Function

 
Adjustable Broil allows the oven to broil at any temperature. Great for melting cheese at 150° F or cooking fish at 400° F. Adjust as needed.

- Step 1. Place food on broil rack or on baking pan if needed.
- Step 2. Close glass door leaving approximately a 2 inch opening at the top of the countertop oven.
- Step 3. Turn the Function dial to Broil.
- Step 4. Turn the Temperature dial to desired temperature.
- Step 5. Turn the Timer to desired cook time.

SPECIAL NOTE: If cook time is less than 20 minutes, you must turn Timer past the 20 minute mark to engage the timer then back to desired time.

Step 6. When Broiling is complete, open door completely and remove food.

WARNING: Cooked food and metal rack can be very hot, handle with care. Do not leave Countertop Oven unattended.

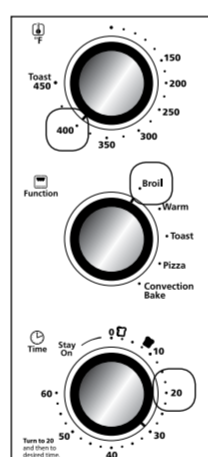

Positioning Rack

- To accommodate a wide variety of foods the oven has two rack positions. The rack can be inserted in the oven in the upper or lower rack guides. The rack will fit into either of the rack guides inside of the Countertop Oven. (See Figure Below)

 
- Before removing the rack allow the unit to cool.

- To remove the rack, open the oven door and pull the rack towards the front of the oven. The rack will slide on the rack guides on the inside of the oven.

PLEASE NOTE: The oven rack may tilt downward causing food to shift when the rack is pulled out. Proceed with caution.

- Positioning of the oven rack will depend on the size of the food and desired browning. Adjust rack downward to prevent top browning and upward to prevent bottom burning.

For best toasting results, position the rack in the upper rack guide.

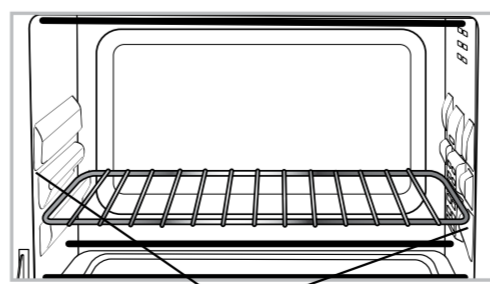

RACK GUIDE OPTIONS

English-6

English-3

Cleaning Your Countertop Oven

- Step 1. Turn all knobs to off position then unplug unit and let it cool.
- Step 2. Wipe unit down with damp cloth. DO NOT IMMERSE IN WATER. Make sure to only use mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit.
- Step 3. Remove crumb tray by pulling out of Countertop Oven.
- Step 4. Shake off crumbs from crumb tray. Cleaning the crumb tray often will avoid any accumulations.
- Step 5. Remove wire rack and clean with damp cloth or place in top rack of dishwasher.

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See Warranty Section.

Storing Your Countertop Oven

Allow the appliance to cool completely before storing. If storing the Countertop Oven for long periods of time make certain that the Countertop Oven is clean and free of food particles. Store the Countertop Oven in a dry location such as on a table or countertop or cupboard shelf. Wind the electrical cord around the cord storage brackets. Other than the recommended cleaning, no further user maintenance should be necessary.

HELPFUL TIPS / TROUBLESHOOTING		
PROBLEM	POTENTIAL CAUSE	SOLUTION
• Overcooked / Undercooked Foods	• Incorrect temperature or time setting • Rack placement	• You may have to adjust the time and temperature to desired taste. • Because your Countertop Oven is smaller than your regular oven, it will heat up faster and generally cook in shorter periods of time. • Refer to "Positioning Rack" Section, Page English-5. Rack may need to be adjusted to accommodate food type.
• Burnt smell initial burnoff	• Food build-up inside oven, on heating elements or in crumb tray.	• Refer to "Cleaning Your Countertop Oven" Section, Page English-6.
• Oven does not turn ON	• Unit is unplugged • Turn Timer	• Plug the Countertop Oven into a 120-volt AC electrical outlet. • Set timer knob and temperature knob to desired setting. Both must be turned on to operate the Countertop Oven.
• Only one heating element is heating up	• Function setting selection determines which heating element will operate.	• Check to see if the Broil setting is selected.
• Heating elements do not stay ON	• Heating elements will cycle ON and OFF to maintain proper heat.	• Confirm function setting is the correct one of choice.

English-7

English-8

